



Effectiveness Other Swabs Can't Touch.



FOCUS ON SANITATION AND DISINFECTION

Now, more than ever, it is crucial to verify the effectiveness of your cleaning and sanitation processes. That means that detection is an even more critical component to healthcare and food safety operations.

Kikkoman A3


Officials around the world are emphasizing the need for enhanced disinfection to control the presence of the SARS-CoV-2 virus on surfaces. It is important to know that your heightened processes are being effective and, while ATP Test (Kikkoman A3) does not directly detect the SARS-CoV-2 virus – *very few technologies can do that* – independent testing has shown that Kikkoman A3 represents a novel ATP test that can detect residues left behind by ineffective cleaning at lower levels than other tests on the market. This makes it an effective means to demonstrate and improve your sanitation and disinfection processes.

Learn more at biochemifa.kikkoman.com/e/kit/.

kikkoman® 

Detection Perfection in 10 Seconds.

- STEP 1 Swab**
Swab the sample and insert the swab into main body
- STEP 2 Measure**
Shake well and insert into the Lumitester
- STEP 3 Analyze**
Measurements (RLU) displayed within 10 seconds

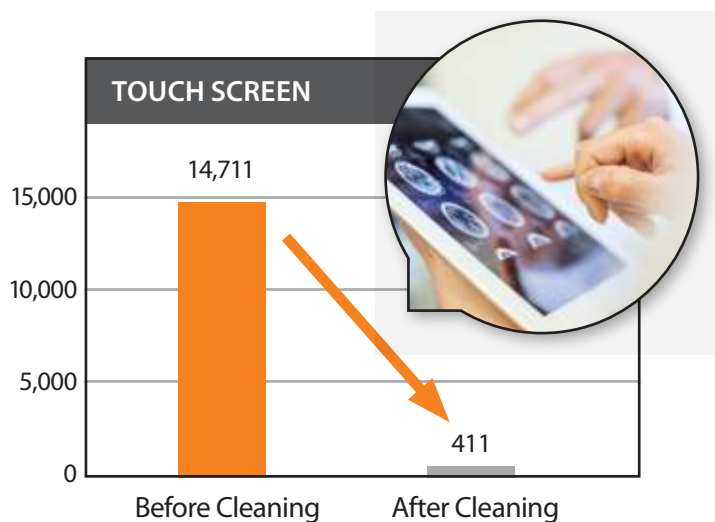

A New Standard in Clean for Many Sites.

FOOD SAFETY



HEALTH CARE



JANITORIAL SERVICES



INDUSTRIAL MANUFACTURING



■ Rapid Hygiene Monitoring System

Lumitester™ Smart Product code: 61234

Measurement time: 10 seconds

Data output: RLU (Relative Light Unit)

Power: Two AA alkaline or nickel hydride rechargeable batteries

Accessories: Two AA alkaline batteries, cleaning brush, USB cable, strap, Quick Manual

- ※ Do not use this product for purposes other than hygiene monitoring.
- ※ It is not to be used for counting general living bacteria or detecting specific pathogens.

■ ATP Test (Kikkoman A3)

LuciPac™ A3 Surface Product code: 60361 100 swabs/kit

LuciPac™ A3 Water Product code: 60365 100 swabs/kit

Storage Condition: 2-8°C (Do not freeze)

25°C: 14 days (Unopened)

30°C: 5 days (Unopened)

Expiry: 15 months after manufacturing date

- ※ Use LuciPac A3 for Lumitester Smart, PD-30 or PD-20. Do not use it for other models.

Kikkoman Biochemifa Company

2-1-1 Nishi-Shinbashi, Minato-ku, Tokyo 105-0003 JAP

biochemifa@mail.kikkoman.co.jp

<https://biochemifa.kikkoman.com/e/>

<https://biochemifa.kikkoman.com/e/kit/>



Scan for more info on
Kikkoman A3

- ※ The information contained in this leaflet is subject to change without further notice.

©2022 Kikkoman Corp. (1522C220501)

LuciPac™ A³